

STEELCASE LEAP V2

User Guide



LIVE BACK

The back of the chair automatically adjusts as you change postures to keep your back supported and spine aligned.

ADJUSTABLE ARM RESTS

Arms move up and down with the height adjustment feature. Arms move in and out to accommodate body width.

ADJUSTABLE LUMBAR SUPPORT

Manually slide the support up or down to comfortably center the pressure in your lower back.

ADJUSTABLE SEAT DEPTH

Move the seat pan in or out for leg comfort.

LOWER BACK FIRMNESS

Adjust the firmness of the seat back to align with the natural curve of your spine.

UPPER BACK FORCE

Set the amount of tension you want as you lean back in the chair.

VARIABLE BACK STOP

Select one of five positions to lock in the recline angle of the back of the chair.

HEIGHT ADJUSTMENT

Pneumatic height adjustment raises and lowers the frame of the chair.

TRANSFER
ENTERPRISES

Pre-Owned, Refurbished and New Office Furniture Providers

(860) 645-9090 sales@tedesk.com www.tedesk.com